


TK-WF009LS

Fântână automată de apă pentru animale

Manual de utilizare

Înainte de a utiliza produsul, citiți cu atenție acest manual și păstrați-l
pentru referință.

Prezentarea produsului

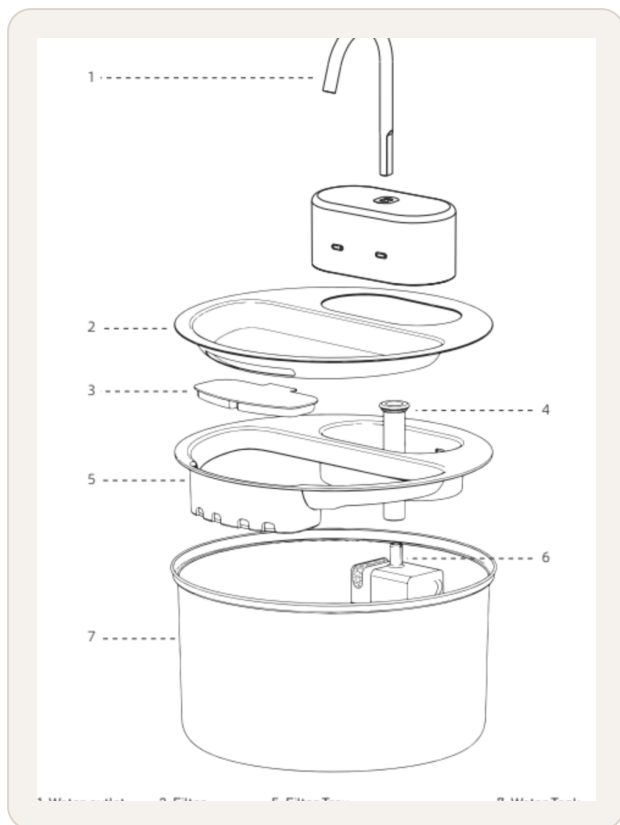

1 Orificiu de ieșire a apei

2 Tavă pentru apă

3 Filtru

4 Conductă de apă

5 Tavă pentru filtru

6 Pompă de apă cu cablu de alimentare

7 Rezervor de apă

Imaginea este doar orientativă; produsul real prevalează.

Măsuri de siguranță

Avertisment

- Eliminați corect toate materialele de ambalare. Țineți pungile de plastic departe de copii și animale, deoarece pot provoca sufocare.
- NU lăsați copiii să se joace cu fântâna, în ea sau în jurul ei.
- Pentru a evita rănirea, supravegheați îndeaproape când aparatul este folosit lângă copii.
- NU folosiți fântâna cu animale care nu pot ajunge la tava de apă sau care au dizabilități fizice.
- NU introduceți obiecte străine în rezervorul de apă.
- NU dezasamblați fântâna în afara componentelor indicate în acest manual.
- NU folosiți fântâna în alt scop decât cel prevăzut.
- Folosiți doar accesorii recomandate sau vândute de producător. Cele nerecomandate pot crea condiții nesigure. NU modificați fântâna.
- NU folosiți aparatul dacă funcționează defectuos sau este deteriorat. Nu încercați reparații pe cont propriu; contactați imediat serviciul clienți.
- Deconectați alimentarea pentru siguranță când aparatul nu este folosit.
- Deconectați alimentarea înainte de întreținere și curățare.
- Deconectați aparatul când nu este folosit, înainte de montarea/demontarea pieselor și înainte de curățare.
- Adaptorul și ștecărul nu trebuie scufundate în apă în timpul curățării.
- Produsul este destinat exclusiv uzului interior.
- Produsul nu trebuie să funcționeze fără apă.
- Nu trageți niciodată de cablu pentru a scoate ștecărul din priză.
- Dacă ștecărul se udă, opriți curentul de la priză. NU încercați să îl scoateți.
- Verificați aparatul după instalare. NU conectați dacă există apă pe contacte sau pe ștecăr.
- Pentru a evita împiedicarea, poziționați cablul departe de zonele de trecere.
- Nu folosiți aparatul în baie.
- Schimbați filtrul la fiecare 2 săptămâni sau când debitul scade vizibil. Pentru două sau mai multe pisici pot fi necesare înlocuiri mai frecvente dacă se înfundă.

Atenție


- NU lăsați animalele să roadă sau să înghită piese. Dacă vă îngrijorează cablul, cumpărați un tub de protecție (din plastic dur) de la orice magazin de bricolaj.
- Dacă este necesar un prelungitor, folosiți unul cu amperaj corespunzător.
- NU instalați sau depozitați fântâna în locuri expuse la intemperii sau la temperaturi sub 0 °C / 40 °F. Citiți și respectați toate notele importante de pe produs și din ambalaj.

Mod de utilizare

1


Înmuiiați filtrul într-un bol curat 5 minute, apoi clătiți-l bine cu apă de la robinet.

1) Filtrul trebuie înmuiat complet înainte de pornirea fântânii; altfel apa poate să nu curgă lin prin filtru și să se reverse. 2) Nu înmuiiați filtrul în rezervorul fântânii, pentru a evita praful de suprafață.

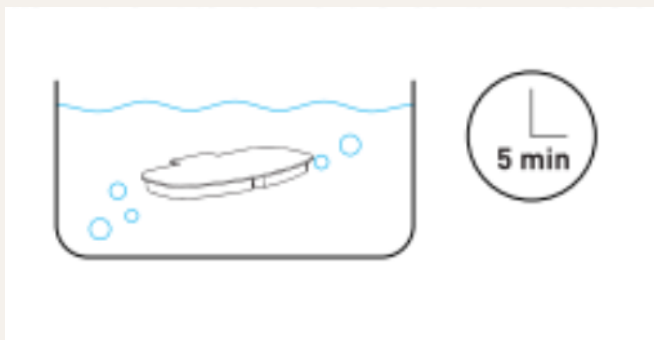

2


Adăugați apă în rezervor.

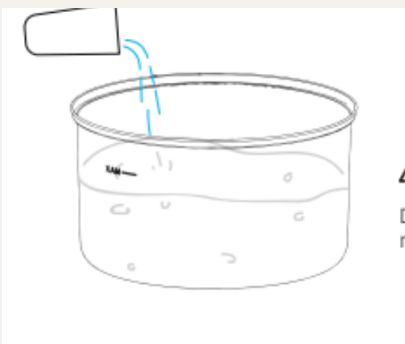

3


Așezați filtrul pe tava de filtru. Apăsăți ferm tava de apă împreună cu tava de filtru.

Nu depășiți nivelul maxim de apă.

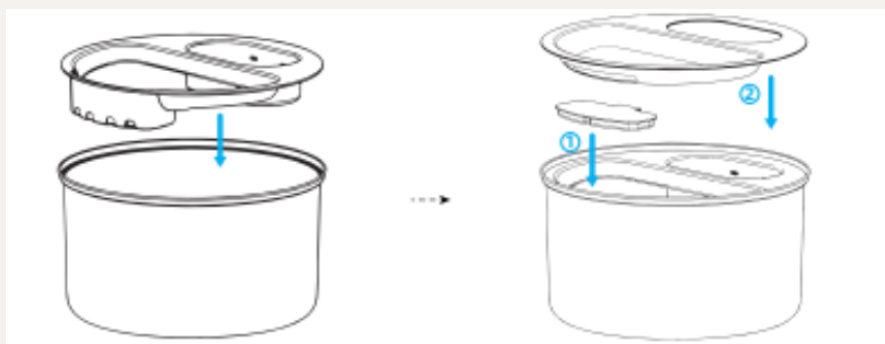


4

Conectați conducta de apă la orificiul de ieșire, apoi conectați pompa cu cablu la conductă și fixați pompa la orificiul de ieșire.

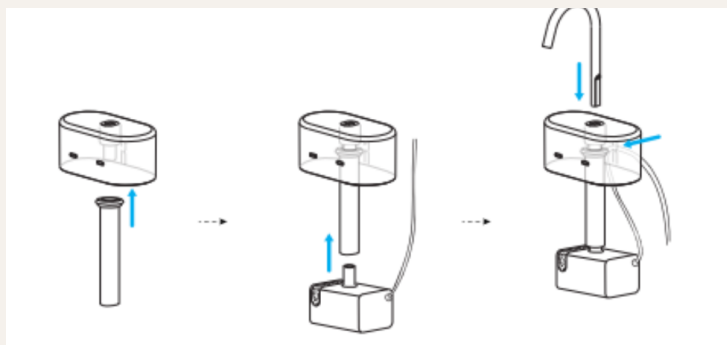


5

Fixați ansamblul orificiului de ieșire în rezervorul de apă.

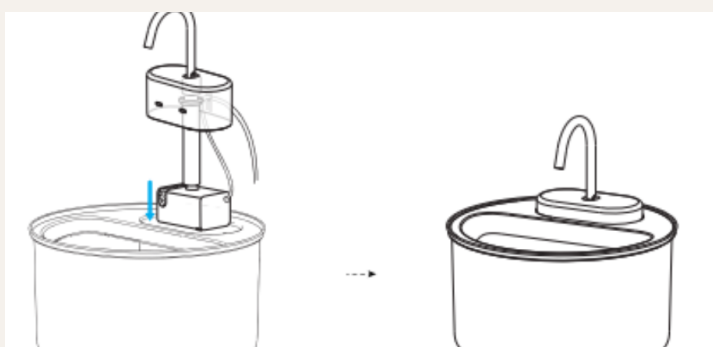

6

Conectați adaptorul de alimentare.

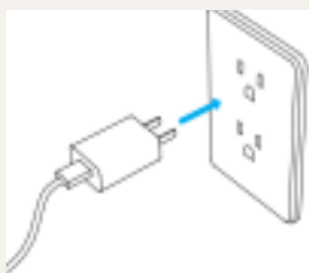

Curățarea fântânii

1. Deconectați fântâna. Înclinați-o ușor pentru a lăsa apa să curgă în rezervor și ridicați tava de apă.
2. Goliți apa din fântână.
3. Curățați piesele cu apă și săpun sigur folosind periile.

Notă! Puteți pune fântâna și în mașina de spălat vase. Scoateți pompa și filtrul înainte de a introduce fântâna în mașina de spălat vase.

Întreținerea pompei

Curățarea pompei este esențială pentru durata de viață a fântânii. Curățați pompa și fântâna la fiecare 2 săptămâni.

1. Scoateți capacul pompei și capacul rotorului, în ordine.
2. Scoateți rotorul cu cârligul periei.
3. Curățați piesele cu apă folosind peria.

Depanare

Problemă	Soluție
Apa se revarsă mereu din tava de apă.	Filtrul poate să nu fie complet înmuiat. Înmuiați-l într-un bol curat (nu în rezervor) timp de 5 minute înainte de prima utilizare.
Pompa se oprește.	1) Umpleți cu apă între MIN și MAX — pompa se defectează dacă funcționează uscată. 2) Curățați pompa, rezervorul și bolul. 3) Dacă nu funcționează, contactați-ne sau găsiți o piesă de schimb online (ex. Amazon).
Cât de des schimb filtrele? De unde le iau?	Se recomandă înlocuirea la fiecare 2 săptămâni. Contactați-ne pentru filtre noi sau găsiți-le online (ex. Amazon).
De ce trebuie să înmoi filtrul înainte de prima utilizare?	Filtrele absorb mai multă apă (și curăță mai mult) când sunt ude și dilatate. Înmuierea îndepărtează particulele depuse pe filtru.
Viteza de ieșire a apei scade.	La prima utilizare (sau după depozitare îndelungată), pompa trebuie să elimine aerul; este normal ca viteza să scadă.


TK-WF009LS

Automatic Pet Water Fountain

User Manual

Before using the product, please read this manual thoroughly and retain it for future reference.

Product Overview

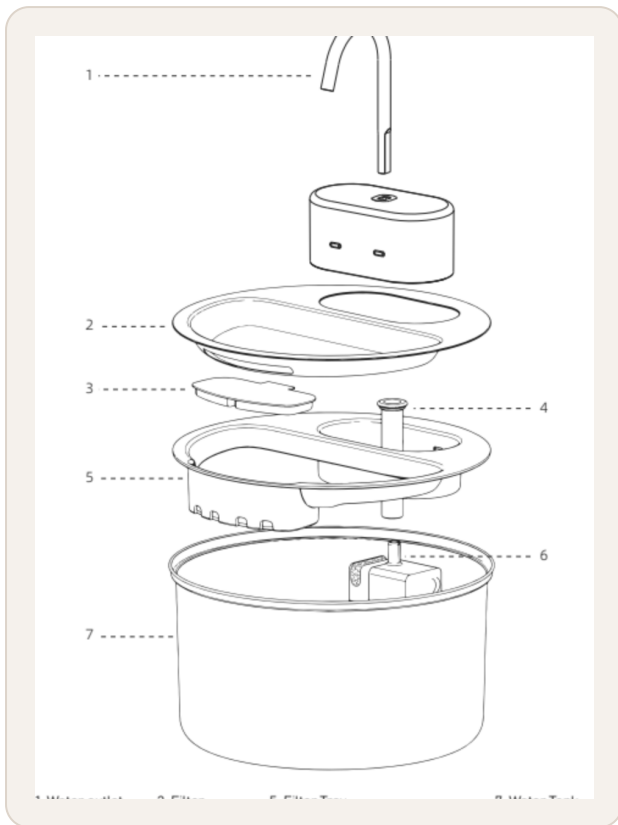

1 Water outlet

2 Water tray

3 Filter

4 Water pipe

5 Filter tray

6 Water pump with power cord

7 Water tank

The picture is for reference only; the product in kind shall prevail.

Safety Precautions

Warning

- Dispose of all packaging materials properly. Keep the polybags away from children and pets as these bags could cause suffocation.
- Do NOT allow children to play with, in or around the pet water fountain.
- To avoid injury, please keep close supervision when the appliance is used near children.
- Do NOT use the water fountain with pets not able to reach the water tray or with any physical disability.
- Do NOT place any foreign object in the water tank.
- Do NOT disassemble the pet fountain other than components as instructed in this manual.
- Do NOT use the pet fountain for anything other than its intended use.
- Only use attachments recommended or sold by the manufacturer. Others may cause an unsafe condition. Do NOT modify the pet fountain.
- Do NOT operate the appliance if it is malfunctioning or has been damaged. Do not attempt repairs yourself; contact customer service immediately.
- Be sure to disconnect the power supply for safety when the appliance is not in use.
- Disconnect the power supply before maintaining and cleaning the machine.
- Always unplug the appliance when not in use, before putting on or taking off parts, and before cleaning.
- The power adapter and wire plug must not be flooded during cleaning.
- This product is for indoor use only.
- This product is not allowed to run without water.
- Never pull the electrical power cord to remove the plug from the wall outlet.
- If the plug of this device gets wet, turn off the electricity of that wall outlet. Do NOT attempt to unplug.
- Check the device after installation. Do NOT plug in if there is water on the contact points or plug.
- To avoid tripping, always position the power cord out of the way of foot traffic.
- Do not use the appliance in the bathroom.
- Change the filter every 2 weeks or when the flow rate has noticeably reduced. For two or more cats, you may need to replace the filters more regularly if they become blocked.


Caution

- Do NOT allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard-plastic protector) at any hardware store.
- If an extension cord is necessary, one unit with a proper rating should be used.
- Do NOT install or store the pet water fountain where it will be exposed to weather or temperatures below 0 °C / 40 °F. Read and observe all important notices on the fountain and in the packaging.


How to Use

- 1** Soak the filter in a clean bowl for 5 minutes, then rinse the filter thoroughly with tap water.

1) The filter must be fully soaked before the fountain is turned on; otherwise the water may not flow through the filter smoothly and cause spillage. 2) Do not soak the filter in the water tank of the fountain in case of any surface dust.

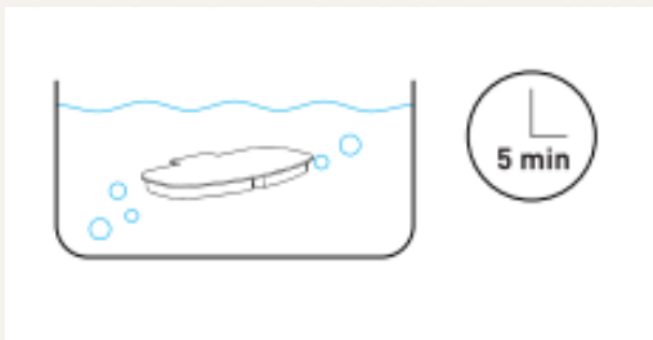


- 2** Add the water to the tank.

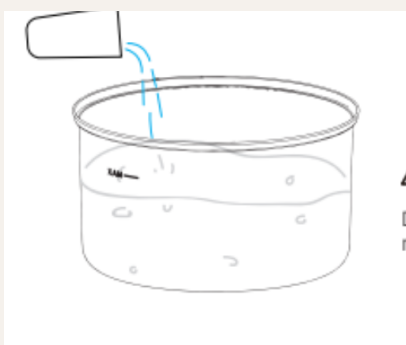


- 3** Place the filter on the filter tray. Press down the water tray with the filter tray firmly.

Do not exceed the maximum water level.

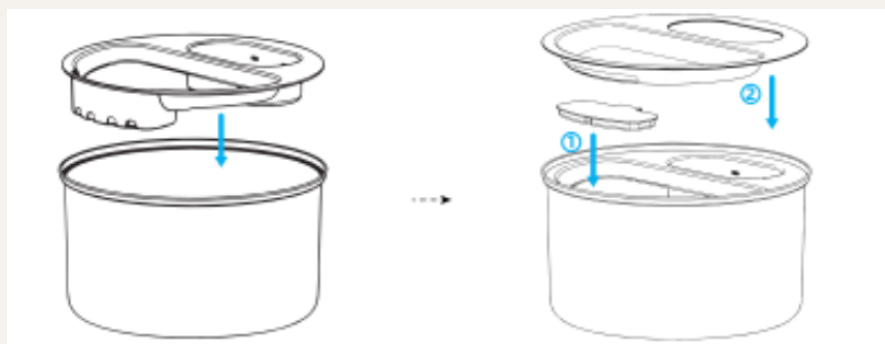


4

Connect the water pipe to the water outlet, then connect the water pump with power cord to the water pipe and snap the pump to the water outlet.

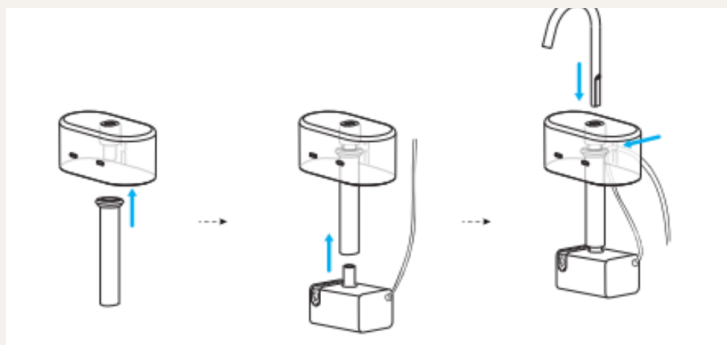


5

Snap the assembled water outlet into the water tank.

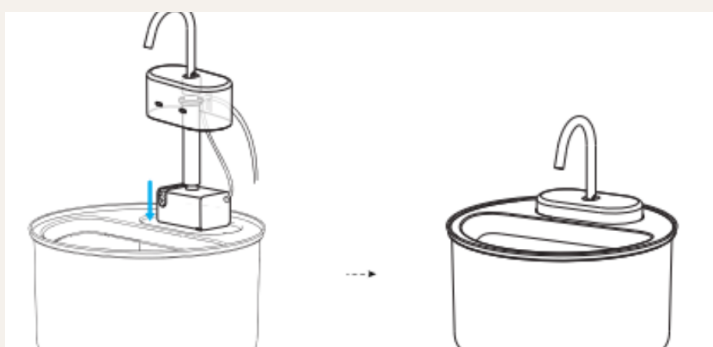

6

Connect the power adapter.

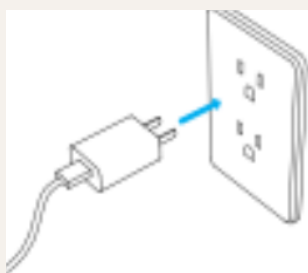

How to Clean the Fountain

1. Unplug the pet water fountain. Tilt it slightly to allow water to flow into the tank, then lift the water tray.
2. Empty the water out of the pet water fountain.
3. Use the brushes to clean the fountain parts with water and safe soap.

Note! You can also put the pet fountain in the dishwasher. Remove the pump and filter before placing the water fountain in the dishwasher.

Pump Maintenance

Cleaning the pump is essential to the longevity of the fountain. Clean the pump and fountain every 2 weeks.

1. Remove the pump cover and impeller cover in sequence.
2. Remove the impeller by the brush hook.
3. Use the brush to clean the parts with water.

Troubleshooting

Problem	Solution
Water keeps spilling out of the water tray.	The filter may not be fully soaked. Please soak the filter in a clean bowl (not in the water tank) for 5 minutes before the first use.
The pump stops working.	1) Fill in water between MIN and MAX — the pump will fail if it runs dry. 2) Clean the pump, water tank and drinking basin. 3) If the above don't work, please contact us, or find a replacement online (e.g. Amazon).
How often should I change the filters? Where to get them?	It's recommended to replace the filters every 2 weeks. Please contact us to purchase new filters, or find them online (e.g. Amazon).
Why do I need to soak the filter before first use?	The filters absorb more water (and therefore clean more water) when they're wet and expanded. Soaking the filter removes particulate matter that may have settled on it.
Water output speed slows down.	For the first use (or reuse after long-time storage), the water pump needs to discharge air; it's normal if the water output speed slows down.