

WF016 · 2.6 L

Fântână automată de apă pentru animale

Manual de utilizare

Înainte de a utiliza produsul, citiți cu atenție acest manual și păstrați-l
pentru referință.

Componente

1 Duză (spout)

2 Tavă pentru apă

3 Filtru

4 Suport pentru filtru

5 Conductă de apă

6 Filtru din burete

7 Pompă de apă cu cablu de alimentare

8 Adaptor de alimentare

9 Fantă pentru cablu

10 Rezervor de apă

11 Talpă antiderapantă

Imaginea este doar orientativă; produsul real prevalează.

Măsuri de siguranță

Avertisment

- Eliminați corect toate materialele de ambalare. Țineți pungile de plastic departe de copii și animale, deoarece pot provoca sufocare.
- NU lăsați copiii să se joace cu fântâna, în ea sau în jurul ei.
- Pentru a evita rănirea, supravegheați îndeaproape când aparatul este folosit lângă copii.
- NU folosiți fântâna cu animale care nu pot ajunge la tava de apă sau care au dizabilități fizice.
- NU introduceți obiecte străine în rezervorul de apă.
- NU dezasamblați fântâna în afara componentelor indicate în acest manual.
- NU folosiți fântâna în alt scop decât cel prevăzut.
- Folosiți doar accesorii recomandate sau vândute de producător. Cele nerecomandate pot crea condiții nesigure. NU modificați fântâna.
- NU folosiți aparatul dacă funcționează defectuos sau este deteriorat. Nu încercați reparații pe cont propriu; contactați imediat serviciul clienți.
- Deconectați alimentarea pentru siguranță când aparatul nu este folosit.
- Deconectați alimentarea înainte de întreținere și curățare.
- Deconectați aparatul când nu este folosit, înainte de montarea/demontarea pieselor și înainte de curățare.
- Adaptorul și ștecărul nu trebuie scufundate în apă în timpul curățării.
- Produsul este destinat exclusiv uzului interior.
- Produsul nu trebuie să funcționeze fără apă.
- Nu trageți niciodată de cablu pentru a scoate ștecărul din priză.
- Dacă ștecărul se udă, opriți curentul de la priză. NU încercați să îl scoateți.
- Verificați aparatul după instalare. NU conectați dacă există apă pe contacte sau pe ștecăr.
- Pentru a evita împiedicarea, poziționați cablul departe de zonele de trecere.
- Nu folosiți aparatul în baie.
- Schimbați filtrul la fiecare 2 săptămâni sau când debitul scade vizibil. Pentru două sau mai multe pisici pot fi necesare înlocuiri mai frecvente dacă se înfundă.

Atenție


- NU lăsați animalele să roadă sau să înghită piese. Dacă vă îngrijorează cablul, cumpărați un tub de protecție (din plastic dur) de la orice magazin de bricolaj.
- Dacă este necesar un prelungitor, folosiți unul cu amperaj corespunzător.
- NU instalați sau depozitați fântâna în locuri expuse la intemperii sau la temperaturi sub 0 °C / 40 °F. Citiți și respectați toate notele importante de pe produs și din ambalaj.

Mod de utilizare

1


Înmuiiați filtrul într-un bol curat 5 minute, apoi clătiți-l bine cu apă de la robinet.

1) Filtrul trebuie înmuiat complet înainte de pornirea fântânii; altfel apa poate să nu curgă lin prin filtru și să se reverse. 2) Nu înmuiiați filtrul în rezervor, pentru a evita praful de suprafață.

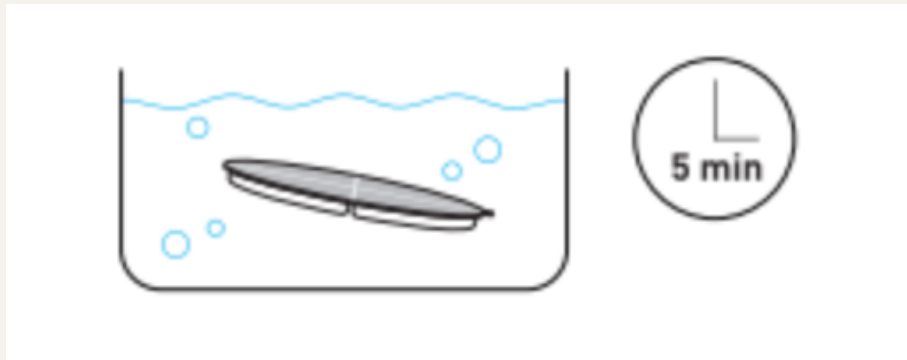

2


Așezați pompa în fânta de la bază conform formei fantei. Apăsăți ferm pentru a fixa admisia pompei de dedesubt și treceți cablul prin fânta pentru cablu.

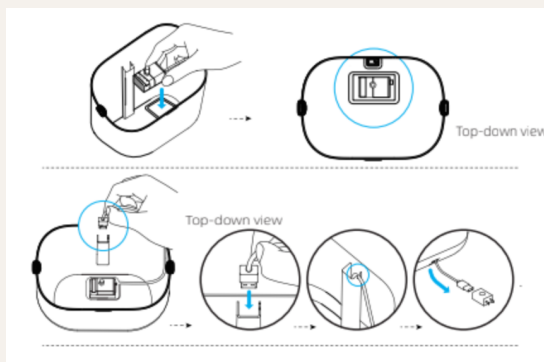

3

Atașați tubul de silicon la pompă. Umpleți rezervorul cu apă.

Mențineți nivelul apei între marcasele MIN și MAX. Dacă rezervorul rămâne complet fără apă, pompa se oprește automat.

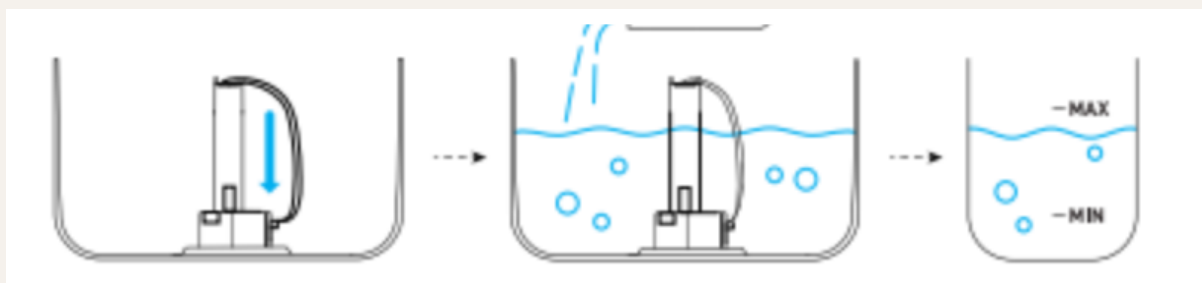


4

Montați suportul pentru filtru, apoi așezați filtrul în suport. Apăsăți ferm pentru ca tubul de ieșire a apei să treacă corect prin orificiu.




5

Montați tava pentru apă. Montarea duzei (spout) este opțională și depinde de preferința de băut a animalului.

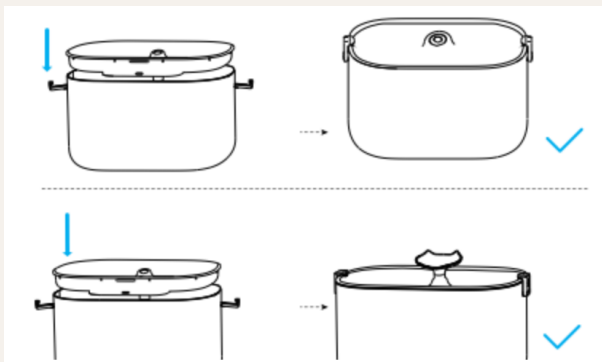

6

Conectați adaptorul de alimentare.

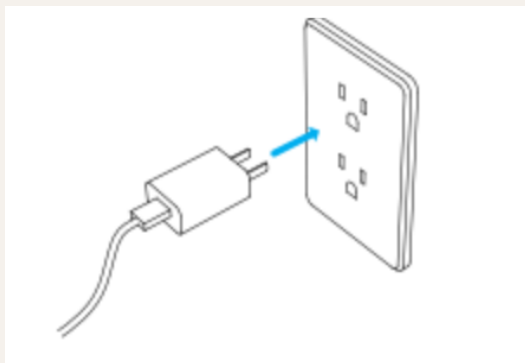

Curățarea fântânii

1. Deconectați fântâna. Înclinați-o ușor pentru a lăsa apa să curgă în rezervor și ridicați tava de apă.
2. Goliți apa din fântână.
3. Curățați piesele cu apă și săpun sigur folosind periile.

Notă! Puteți pune fântâna și în mașina de spălat vase. Scoateți pompa și filtrul înainte de a introduce fântâna în mașina de spălat vase.

Întreținerea pompei

Curățarea pompei este esențială pentru durata de viață a fântânii. Curățați pompa și fântâna la fiecare 2 săptămâni.

1. Scoateți capacul pompei și capacul rotorului, în ordine.
2. Scoateți rotorul cu cârligul periei.
3. Curățați piesele cu apă folosind peria.

Depanare

Problemă	Soluție
Apa se revarsă mereu din tava de apă.	Filtrul poate să nu fie complet înmuiat. Înmuiați-l într-un bol curat (nu în rezervor) timp de 5 minute înainte de prima utilizare.
Pompa se oprește.	1) Umpleți cu apă între MIN și MAX — pompa se defectează dacă funcționează uscată. 2) Curățați pompa, rezervorul și tava. 3) Dacă nu funcționează, contactați-ne.
Cât de des schimb filtrele? De unde le iau?	Se recomandă înlocuirea la fiecare 2 săptămâni. Contactați-ne pentru filtre noi.
De ce trebuie să înmoi filtrul înainte de prima utilizare?	Când este complet saturat, filtrul se dilată și absoarbe mai multă apă, filtrând mai eficient. Înmuierea îndepărtează și particulele libere rămase pe filtru.
Viteza de ieșire a apei scade.	La prima utilizare (sau după depozitare îndelungată), pompa trebuie să elimine aerul; este normal ca debitul să scadă în acest proces.

WFO16 · 2.6 L

Automatic Pet Water Fountain

User Manual

Please read this manual carefully before using the product and keep it properly for future reference.

Components

1 Spout

2 Water Tray

3 Filter

4 Filter Holder

5 Water Pipe

6 Foam Filter

7 Water Pump with Power Cord

8 Power Adapter

9 Cable Slot

10 Water Tank

11 Anti-Slip Pad

The picture is for reference only; the product in kind shall prevail.

Safety Precautions

Warning

- Dispose of all packaging materials properly. Keep the polybags away from children and pets as these bags could cause suffocation.
- Do NOT allow children to play with, in or around the pet water fountain.
- To avoid injury, please keep close supervision when the appliance is used near children.
- Do NOT use the water fountain with pets not able to reach the water tray or with any physical disability.
- Do NOT place any foreign object in the water tank.
- Do NOT disassemble the pet fountain other than components as instructed in this User Manual.
- Do NOT use the pet fountain for anything other than its intended use.
- Only use attachments recommended or sold by the manufacturer. Others may cause an unsafe condition. Do NOT modify the pet fountain.
- Do NOT operate the appliance if it is malfunctioning or has been damaged. Do not attempt repairs yourself; contact customer service immediately.
- Be sure to disconnect the power supply for safety when the appliance is not in use.
- Please disconnect the power supply before maintaining and cleaning the machine.
- Always unplug the appliance when not in use, before putting on or taking off parts, and before cleaning.
- The power adapter and wire plug must not be flooded during cleaning.
- This product is for indoor use only.
- This product is not allowed to run without water.
- Never pull the electrical power cord to remove the plug from the wall outlet.
- If the plug of this device gets wet, turn off the electricity of that wall outlet. Do NOT attempt to unplug.
- Check the device after installation. Do NOT plug in if there is water on the contact points or plug.
- To avoid tripping, always position the power cord out of the way of foot traffic.
- Do not use the appliance in the bathroom.
- Change the filter every 2 weeks or when the flow rate has noticeably reduced. For two or more cats, you may need to replace the filters more regularly if they become blocked.


Caution

- Do NOT allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard-plastic protector) at any hardware store.
- If an extension cord is necessary, one unit with a proper rating should be used.
- Do NOT install or store the pet water fountain where it will be exposed to weather or temperatures below 0 °C / 40 °F. Read and observe all important notices on the fountain and in the packaging.


How to Use

- 1 Place the filter in a clean bowl and soak it in water for 5 minutes before use.

1) The filter must be fully soaked before starting the fountain. Otherwise, water may not flow properly through the filter, which could cause overflow. 2) Do not soak the filter directly inside the water tank, as dust or particles on the filter surface may enter the tank.

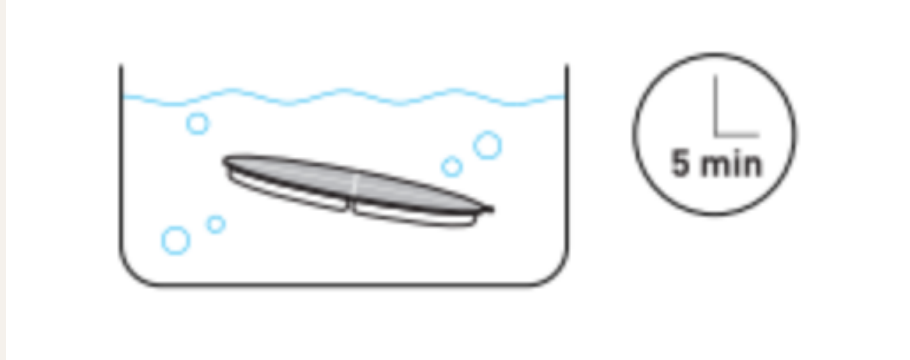


- 2 Place the pump into the bottom slot according to the slot shape. Press down firmly to ensure the pump inlet underneath is securely attached. Route the power cord through the cable slot.

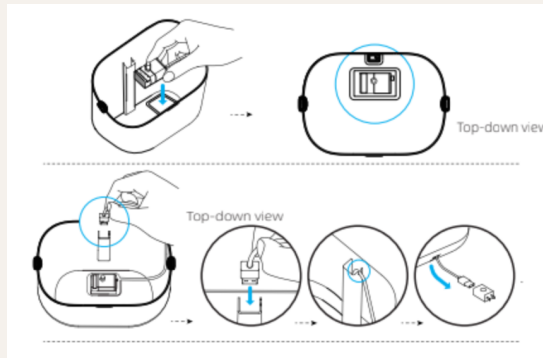

- 3 Attach the silicone tube to the pump. Fill the water tank with water.

Keep the water level between the MIN and MAX water level marks. If the water runs completely dry, the pump will automatically stop operating.

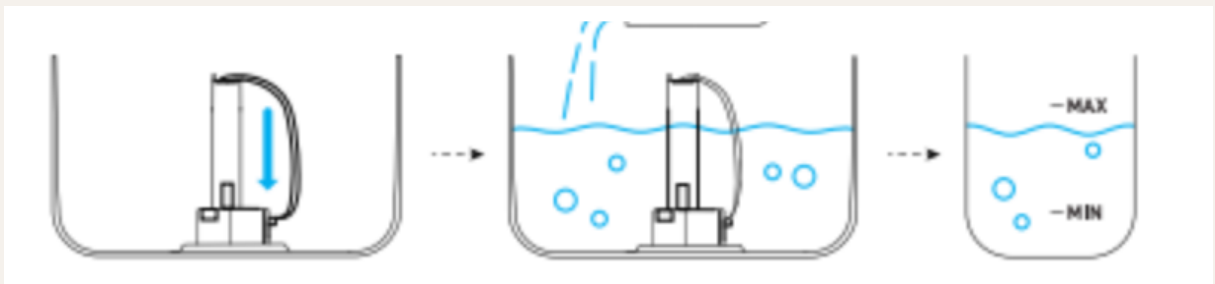


4

Install the filter holder, then place the filter into the holder. Press firmly to ensure the water outlet tube extends through the opening properly.




5

Install the water tray. Installing the spout is optional and depends on your pet's drinking preference.

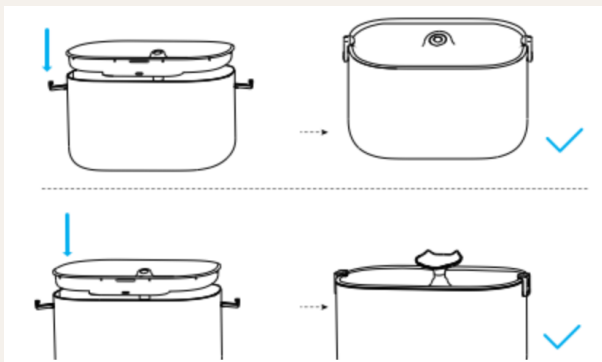

6

Connect the power adapter.

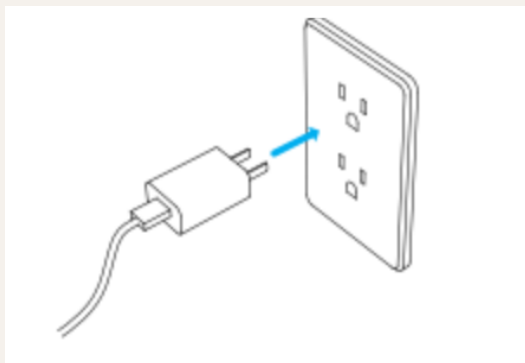

How to Clean the Fountain

1. Unplug the pet water fountain. Tilt it slightly to allow water to flow into the tank, then lift the water tray.
2. Empty the water out of the pet water fountain.
3. Use the brushes to clean the fountain parts with water and safe soap.

Note! You can also put the pet fountain in the dishwasher. Remove the pump and filter before placing the water fountain in the dishwasher.

Pump Maintenance

Regular pump cleaning is essential to keep the pet water fountain running properly and extend its lifespan. Clean the pump and fountain every 2 weeks.

1. Remove the pump cover and impeller cover in sequence.
2. Remove the impeller by the brush hook.
3. Use the brush to clean the parts with water.

Troubleshooting

Problem	Solution
Water continuously overflows from the water tray.	The filter may not be fully saturated. Before first use, soak the filter in a clean bowl of water (not inside the water tank) for 5 minutes.
The pump has stopped working.	1) Add water until the level is between "MIN" and "MAX". Running the pump dry may cause damage. 2) Clean the pump, water tank, and water tray. 3) If the issue persists, please contact us.
How often should I replace the filter? Where can I buy one?	We recommend replacing the filter every 2 weeks. Please contact us to purchase replacement filters.
Why do I need to soak the filter before first use?	When the filter becomes fully saturated, it expands and absorbs more water, allowing it to filter more effectively. Soaking also helps remove any loose particles that may remain on the filter.
The water flow has become slower.	During first use (or after long-term storage), the pump may need to release trapped air. Reduced water flow during this process is normal.